

AC ULTRA Plus Air-Conditioner Remote Control User's Guide

Product Description

The AC ULTRA PLUS is the leading replacement A/C remote control in Australia. With over 1,000 codes it is compatible with 99% of the air conditioners sold in Australia. It is simple and easy to program and will include many of the features of your original remote

Need support? Ring Thermo Controls Mon-Fri 9am-5pm on 03 8899 6272. You can also scan the QR code on the front for the latest codes.

Instructions to program your remote control with your air conditioner (A/C)

1. Open the battery cover and insert two AAA (UM-4 or R03) batteries.
2. Find your A/C code brand on the back of these instructions. If there is more than one code for one brand, you will have to try them one by one. E.g. for FUJITSU, try model codes 0127 to 0137 then 0464 etc. Next, lift the front cover.
3. To Program your four digit code: Press and hold the **"SELECT"** key, the four digit code on the LCD will begin flashing. Press **"CODE"** - or **+** until required brand code appears. Then press the **"ENTER"** key, the brand code stops flashing. Aim the remote at the A/C and press the **"POWER"** key, your remote is programmed and you can control your air conditioner. If not, select the next code from the table and test again.

Brand not listed? Code you have tried did not work? DON'T PANIC

If you don't know the brand of your air conditioner, you cannot find your brand on the list or the codes you tried don't work? Don't worry, there is probably a code in the remote that will get your A/C working. Please follow these steps:

1. Press and hold the **"SELECT"** key, the four digit code on the LCD will begin flashing. Point the remote control at the A/C, begin pressing the **"SELECT"** key. Continue to press the **"SELECT"** key. Every time you press the **"SELECT"** key the remote is sending an infrared signal to turn on the A/C. Continue to press the **"SELECT"** and eventually the remote will find a code to turn on your A/C. You will hear a beep or the fan will turn on.

Be patient, it can take up to ten minutes to cycle through 1,028 codes. Alternatively you can hold down the **"SELECT"** key for 5 seconds and it will cycle through itself. This will take 20 minutes. After the A/C turns on, try other function keys. If they do not work, repeat above steps finding the correct code. Write the number on the inside cover if you need to refer back to it. If this fails, please contact us.

Switching between Celsius and Fahrenheit

Press TEMP UP and TEMP DOWN simultaneously.

Clock setting of remote control

1. Press the **"CLOCK"** key, the clock on LCD will flash.
2. Press **"TIME"** **+** or **-**, adjust to correct time. Time is in 24 hour format.
3. Press the **"CLOCK"** key again, your clock is now set.

Timer ON/OFF settings of remote control. (Remote must be in-line-of-sight!)

Timer ON: (can only be set with the air conditioner OFF)

1. Press the “**TIMER ON**” key, the clock signal on LCD appears and time flashes.
2. Press “**TIME**” + **or** – key, to adjust the time when you want the air conditioner to turn on automatically.
3. Timer flashes and it will stop after 5 seconds. The LCD display current time and clock signal. Setting is complete. To check the ON time (once set) simply press the “**TIMER ON**” once.

Timer OFF: (can only be set with the air conditioner ON)

1. Press the “**TIMER OFF**” key, the clock signal on LCD appears and time flashes.
2. Press “**TIME**” + **or** - adjust the time when you want to make the air conditioner turn off automatically.
3. Time flashes, and stops after 5 seconds. The LCD display current time and clock signal. Setting is complete. To check the OFF time (once set) simply press the “**TIMER OFF**” once. To nullify timer set to 0:00.

Note:

1. After timer setting is finished, make sure the AC unit and remote are in Line of Sight. The remote needs to communicate with the AC unit to work.
2. If you want to see the timer settings, press “**TIMER ON/OFF**” key, the LCD will display the time, and it will default to the current time after 5 seconds.
3. NOTE: You can only set the AC unit to go ON or OFF, not both at the same time.

Attention:

1. Batteries usually last between one and two years. If it is not used for a long time, remove the batteries to avoid battery leakage that could damage the machine. When the LCD looks dim, change both batteries. (New and old batteries can not be used together) After the batteries are replaced, it is not necessary to set model code again. You will need to set the time again.
2. If abnormal situation appears because of using wrong code reset the unit by placing pen tip or other item into “reset” hole. Press to restore normal status.
3. The LCD will display the code number when pressing the model code “Enter” key. After 5 seconds it displays the time.
4. Note: this remote control only works by direct Line of Sight. Check carefully there are no barriers between remote and air conditioner when using the timer ON/OFF function. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller both units must be in Line of Sight of each other.
5. The manufacturer has the right to change the parameters and functions of this product.

Controllable distance: Up to 8 meters

Battery model: Battery AAA(UM-4,R03)×2

Dimension: L127×W48×D22mm

Weight: Approx 84g (with batteries)



Updated July 2023

ALL CODES ARE FOUR DIGITS. IF TWO CODES ARE SEPARATED BY A HYPHEN, INCLUDE ALL CODES IN BETWEEN.

Australian Brands	CODE	Australian Brands	CODE
ACTRON AIR	0573	GREE	0309-0316, 0822, 0827, 0830
AGER / AGREE	0489, 0785, 0107, 0108	HAIER	0266-0272, 0453-0455, 0781, 0964
AIRWELL	0529, 0555, 0556	HISENSE	0332-0335, 0340, 0671, 0681, 0845, 0847
AKAI	0489	HITACHI	0118-0126, 0500, 0501, 0631, 0637
ALPIN	0252, 0253, 0617, 0764, 0765	HOFFWEL	0107, 0282, 0289, 0292, 0811
ARENA	0206, 0212, 0229, 0718, 0724, 0741	HOMEMAKERS	0297-0300, 0451, 0810, 0960, 0963
ARLEC	0202	HYUNDAI	0202, 0433, 0550, 0551, 0609, 0714, 0945
AUSSIE AIR / ATD	0809, 0169, 0170	KELVINATOR	0151, 0197, 0203, 0482, 0619
BLUEWAY	0300	LENNOX	0260-0265, 0435, 0773, 0777, 0813
BREEZE AIR	0127	LG	0197-0200, 0504, 0567, 0572, 0710, 1016
CARRIER	0203-0209, 0456-0458, 0482-0486, 0563-0565, 0721, 0967	MIDEA	0260-0265, 0773, 0777, 0813
CELSIUS	0167, 0340	MISTRAL	0237
COOL OR COSY	0621	mitsubishi (ALL)	0010-0045, 0476-0479, 0515, 0556, 0568, 0582, 0695, 0989, 1018
COOL PARTS GC	0416-0418, 0929, 0968	NEC NATIONAL	0138-0154, 0169, 0200, 0658, 0663, 0666
COOLINE	0187, 0206	ONSEN	0298
DAEWOO	0203-0209, 0406, 0718, 0818, 0918	PANASONIC	0138-0154, 0483, 0491, 0658, 0663, 0666, 0995
DAIKIN	0171-0183, 0566, 0567, 0685, 0693, 0696	RINNAI	0297
DE LONGHI	0232, 0482	SAMSUNG	0188-0196, 0503, 0701, 0707, 1015
DERBY/DIVINCHI	0311, 0289, 0400	SANYO	0046-0095, 0562, 0598, 0605, 1011, 1016
ELECTROLUX	0216-0220, 0569, 0619, 0728, 0730, 0733	SHARP	0096-0106, 0608, 0617, 0631
EMAILAIR	0127, 0553, 0556, 0558, 0639, 0642	TCL	0273-0281, 0570, 0619, 0786, 0790, 0792, 0861
FUJITSU	0127-0137, 0464, 0509, 0640, 0648, 0552, 0554	TECO	0008, 0232, 0256, 0473-0475, 0482, 0609, 0619, 0768 0986
GE	0047	TOSHIBA	0107-0117, 0493-0499, 0561-0562, 0620, 0629, 0815, 1011
GLEE	0398, 0399, 0521, 0910	WEATHERMAKER	0203-0209, 0482-0486 0456-0458, 0563 0565 0721, 0967
GOLDSTAR	0201, 0466-0469, 0713, 0978, 0980	WHIRLPOOL	0164-0170, 0502, 0678, 0729, 1014

Other Brands	CODE	Other Brands	CODE
ACSON	0234	LEVANTE	0106
AUCMA	0288-0296, 0462, 0802, 0807, 0901	LIANGYU	0233, 0451, 0745, 0837, 0963
AUX	0297-0300, 0451, 0810, 0960, 0963	LITTLE DUCK	0015-0020, 0528, 0531, 0639
BANSHEN	0264, 0678, 0776	LOREN-SEBO	0255, 0471, 0472, 0767, 0984
BOERKA	0383, 0434, 0436-0437, 0522, 0948	LUXAIRE	0297
BRIVAS	0107	MACQUAY	0234-0237, 0465, 0747, 0903
CELESTIAL	0307	MISAKAE	0237
CHANGHONG	0301-0308, 0627, 0815, 0820	NORITZ	0431, 0859, 0943
CHIGO	0379-0382, 0890, 0892, 0894	OMEGA	0559
CHOFU	0184-0187, 0581, 0696, 0698	OMNI	0146, 0262
CHUNLAN	0345-0350, 0450, 0453, 0862, 0967	PANDA	0378, 0505, 0509, 0763, 0890
CLIMA VENETA	0572	PHILCO	0210, 0211, 0487-0490, 0723, 0999, 1000
CONIA	570 571, 0809, 812, 861	POLAR ICE	0571
CONROWA	0377, 0889, 1010	PROTON	0421-0423, 0934, 0956
CONSUL	0463, 0734, 0975	RAYBO	0362-0367, 0875, 0893, 1023, 1028
CORONA	0155-0163, 0459, 0561, 0667, 0675	ROWA	0369, 0438, 0439, 0732, 0881, 0950
COUNTRY AIR	0560	SABRO	0435, 0506-0508, 0947, 1018, 1020
DEC / DHL	0504, 0592	SAIJO DENKI	0212-0215, 0721, 0725, 0726
DL	0302	SAMPO	0424-0426, 0931, 0936, 0938
DOCTOR	0221, 0449, 0733, 0817, 0961	SASUKI	0254, 0470, 0654, 0766, 0982
DONGBAO	0355-0361, 0869, 0873, 0875	SHANGLING	0384-0388, 0444, 0445, 0896, 0900, 0956, 0989
DONGXINBAO	0413, 0891, 0925	SHANXING	0392, 0449, 0904, 0961, 0986
ELECTRA	0557	SHENGFENG	0376, 0406, 0480, 0888, 0992
FRESTECH	0277, 0665, 0789	SHINCO	0351-0354, 0454-0456, 0863, 0866, 0967, 0996
FUJITA/FUJIAIRE	0265, 0297	SHUAI KANG	0288, 0587, 0800
FUNAI / FUJIN	0430, 0481, 0802, 0942, 0993 / 0002	SHUANGLU	0376, 0404-0407, 0480, 0916, 0919
GALANZ	0371, 0372, 0883, 0992	SONGGE	0428, 0429, 0940, 0949
GUQIAO	0244, 0491, 0756, 0803, 1003	SOVA	0409, 0410, 0632, 0922
HUABAO	0336-0344, 0848, 0852, 0855, 0858	STARWAY	0714, 0345, 0859
HUAKE	0408, 0493-0498, 0920	SUMMER	0427, 0672, 0939
HUALING	0317-0325, 0452, 0830, 0835, 0965	SUNDURG	0257, 0505, 0769, 0815, 1017
HUAMEI	0402, 0460-0465, 0816, 0914, 0976	SWAN	0434, 0732, 0946
HUIFENG	0370, 0510, 0512, 0882, 1023	TADIRAN	0246-0251, 0758, 0762, 0925
HUIKANG	0368, 0441-0443, 0880, 0938, 0954	TATUNG	0419, 0420, 0876, 0931
JBS	0202, 0273	TIANDI, MICOM	0415, 0643, 0927
JDC	0373, 0440, 0885, 0952, 0956	TITANIUM	0339
JET-AIR / JBS	0169 / 0202	TRANE	0227-0232, 0598, 0739, 0743
JIANGNAN	0432, 0944, 1004	UNI-AIR	0222-0224, 0450, 0735, 0871, 0962
JINDA	0414, 0499, 0504, 0926, 1012	WEILI	0393-0396, 0905, 0908, 0986
JINSONG	0389-0391, 0468-0448, 0902, 0959, 0989	WINIA	0550
JOHNSON	0245, 0492, 0757, 0989, 1004	XILENG	0411-0412, 0526, 0923
KANGLI	0374, 0375, 0654, 0886	XINLE	0400, 0401, 0623, 0912
KELON	0282-0287, 0794, 0798, 0802	YANGZI	0403, 0489-0492, 0915, 1004
KLIMATAIR	0225, 0226, 0452, 0738, 0964, 0966	YINYAN	0258-0259, 0326-0331, 0770, 0838, 0843, 0941
KONKA	0397, 0457-0459, 0808, 0909, 0970	YORK	0238-0243, 0573, 0750 - 0756