


Set Switches to -  
 SW 1= OFF  
 SW 2 = ON  
 SW 3 = ON  
 SW 4 = ON  
 SW 5 = OFF  
 SW 6 = OFF  
 SW 7 = OFF  
 SW 8 = OFF

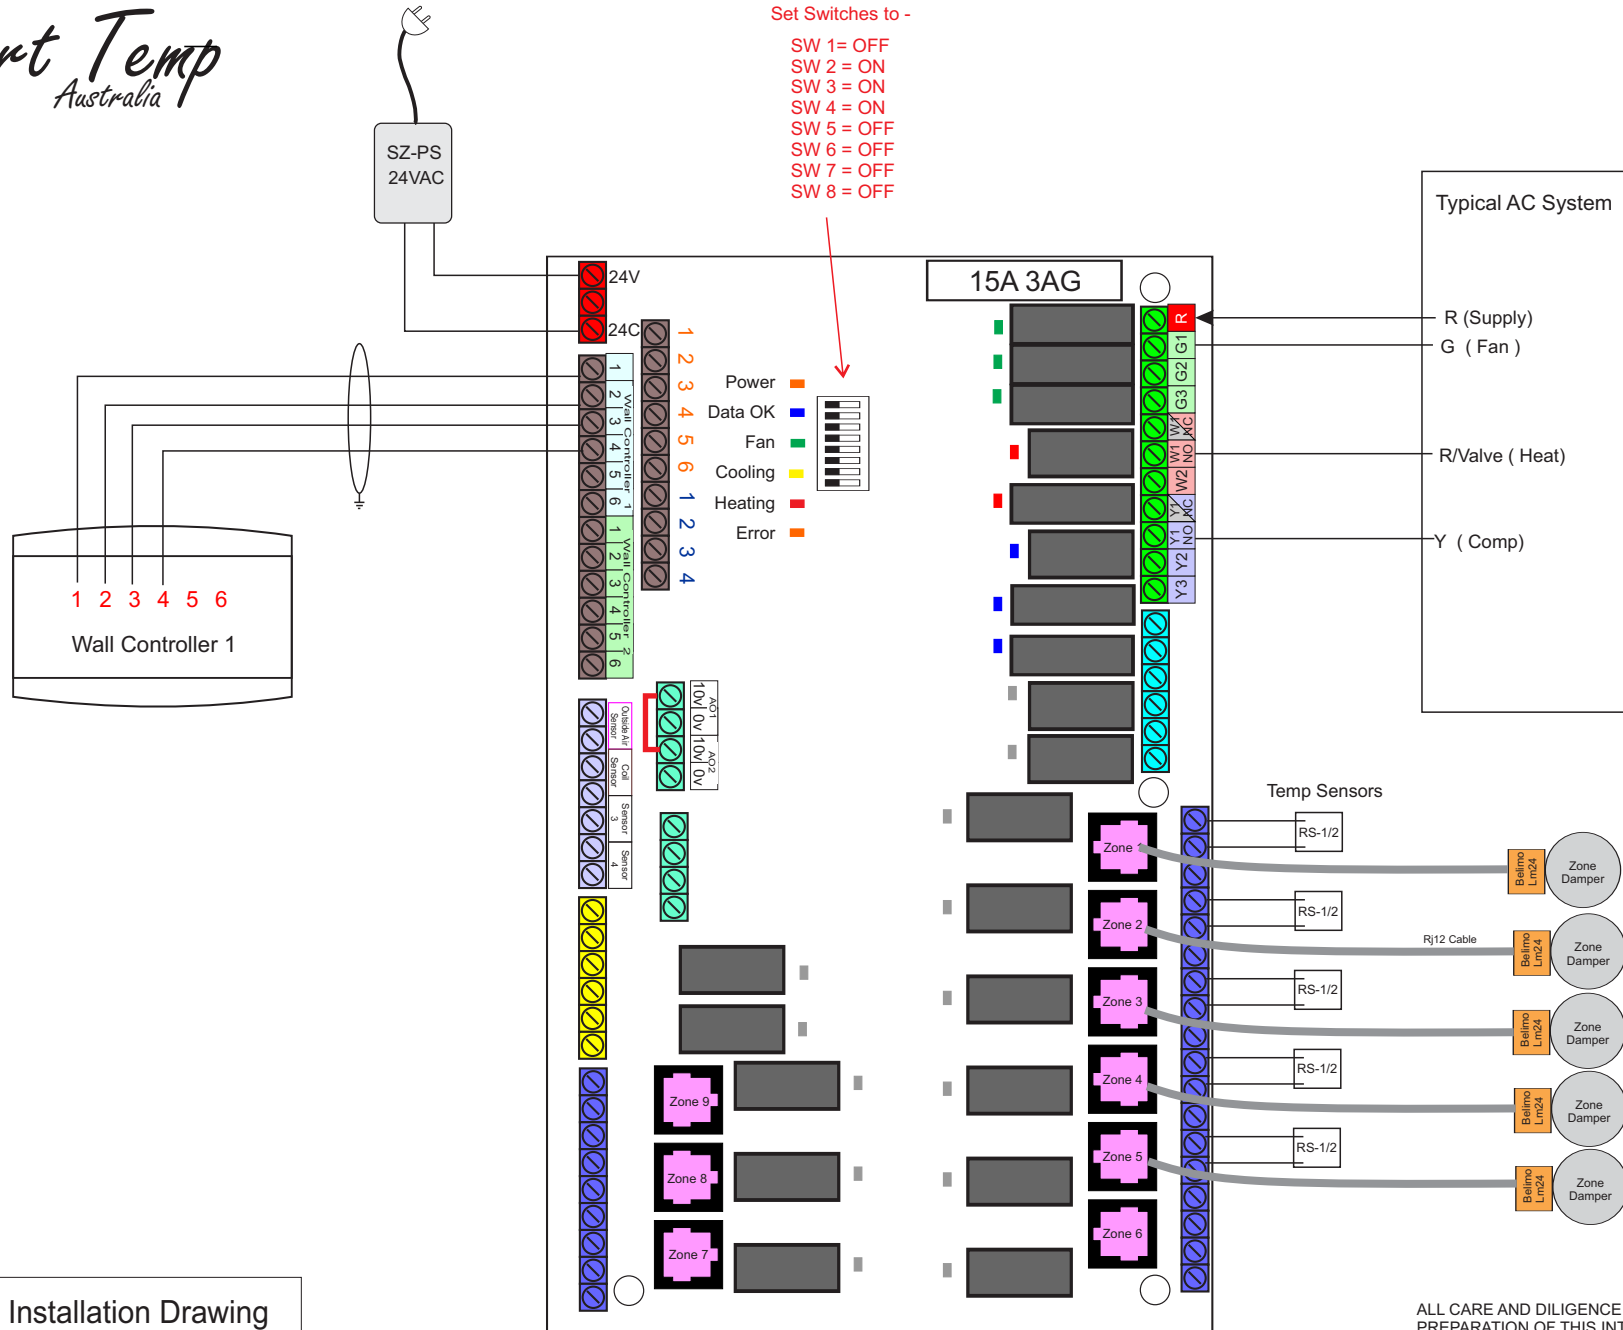

### Installation Drawing

Drawing Name  
 Inspire Touch - 5 Zones wired to 1 Stage HP with 1 Fan Speed

Drawing Revision History		
19/07/2024	REV 1.0	By: John K

Refer to Installer Manual for Zone configuration

ALL CARE AND DILIGENCE HAS BEEN TAKEN IN THE PREPARATION OF THIS INTERFACE DIAGRAM. **SMART TEMP AUSTRALIA PTY LTD** WILL ONLY BE RESPONSIBLE FOR DAMAGE CAUSED TO THE SMART TEMP PRODUCT, AND ONLY IF IT HAD BEEN CORRECTLY APPLIED IN ACCORDANCE WITH THE MANUFACTURERS INSTRUCTIONS. IT IS THE DEALER / CONTRACTORS SOLE RESPONSIBILITY TO ENSURE CORRECT OPERATION OF THE MAJOR EQUIPMENT IS MAINTAINED.