





Enter the SMT-450 Installer menu (PIN is 0021) Under "System Type Selection" choose the "Others" option, then select "Conventional 1H no fan"

> ALL CARE AND DILIGENCE HAS BEEN TAKEN IN THE PREPARATION OF THIS INTERFACE DIAGRAM. SMART TEMP AUSTRALIA PTY LTD WILL ONLY BE RESPONSIBLE FOR DAMAGE CAUSED TO THE SMART TEMP PRODUCT, AND ONLY IF IT HAD BEEN CORRECTLY APPLIED IN ACCORDANCE WITH THE MANUFACTURES INSTRUCTIONS.

> IT IS THE DEALER / CONTRACTORS SOLE RESPONSIBLITY TO ENSURE CORRECT OPERATION OF THE MAJOR EQUIPMENT IS MAINTAINED.



Unit 20, 1488 Ferntree Gully Road Knoxfield Vic 3180

Ph:(03) 9763 0094 www.thermostat.com.au

Fax (03) 9763 0098

Chassis Ground