

- 3 or 5 minutes fixed, 10 minutes adjustable
- Works with anticipator type thermostats

### MODE OF OPERATION

Upon initial thermostat closure, the load is energized. When the thermostat opens or there is a loss of power, the load is de-energized and the delay period begins. The compressor will not start again during the delay period.

### SPECIFICATIONS

#### Input

- **Voltage:** 18-240 VAC
- **Frequency:** 50-60 Hz

#### Output

- **Output Ratings:**
  - **Maximum:** 1 amp
  - **Minimum:** 40 mA
  - **Inrush:** 10 amps


#### Time Delay

- **Fixed:** 3 or 5 minutes
- **Adjustable:** 10 minutes

### INSTALLATION

1. Disconnect power.
2. Connect terminals as shown in the wiring diagram below.
3. Select the desired time delay (adjustable models only).
4. Reapply power, check operation.

### TIMING DIAGRAM

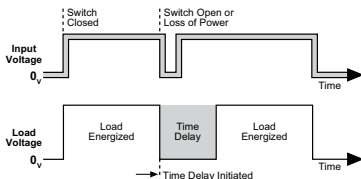

### WIRING DIAGRAM

