


MANUAL INPUTS FOR D4CPU


SIGNALS MUST BE ISOLATED

24V AC or VOLT FREE CONTACTS


ie:

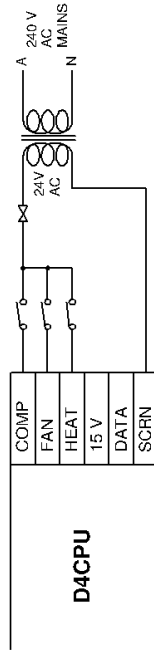

or

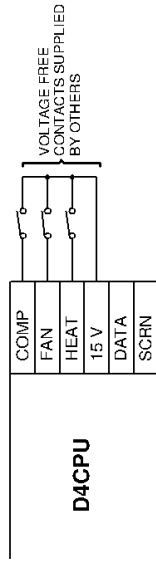

Do not

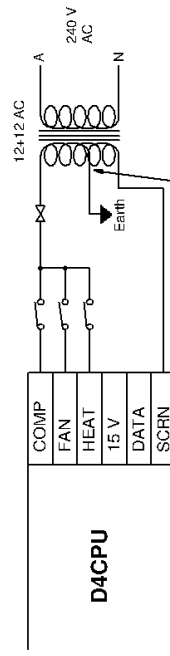

DO NOT USE 24V AC SUPPLY CENTER TAPPED TO GROUND

ActronAir is constantly seeking ways to improve the design of its products. Therefore specifications are subject to change without notice. Please check prior to purchase.