



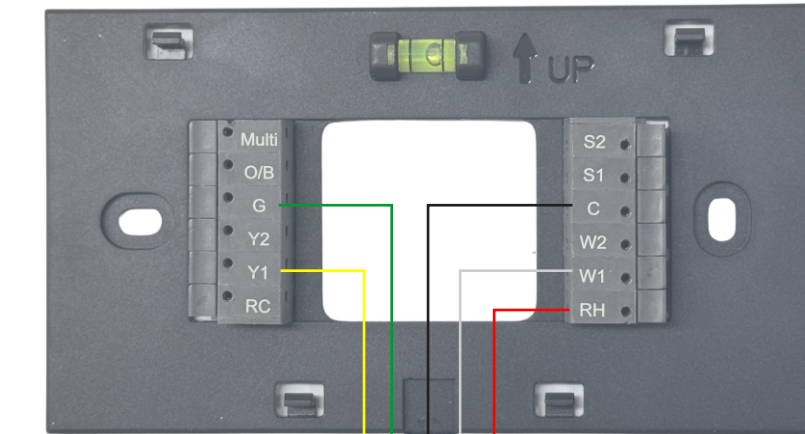

Under "System Type Selection" choose Conventional 1H1C

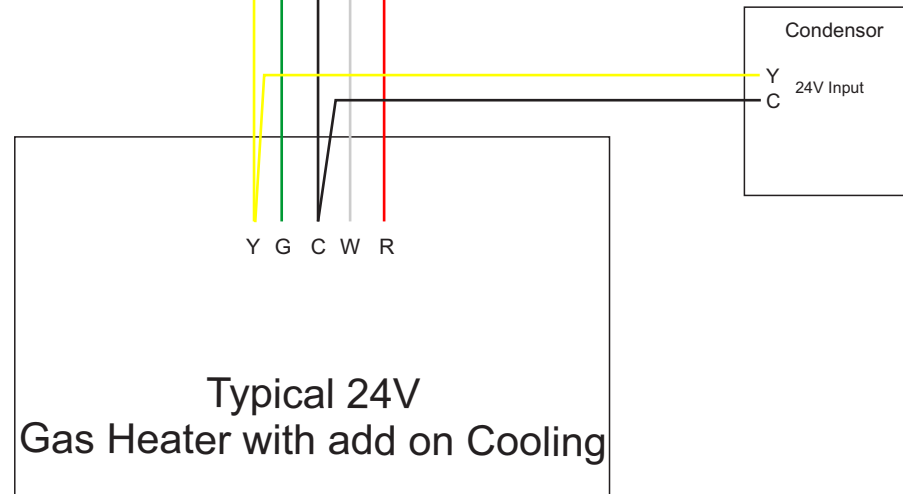

RH-RC Jumper Switch = ON ( Factory Default)



ALL CARE AND DILIGENCE HAS BEEN TAKEN IN THE PREPARATION OF THIS INTERFACE DIAGRAM. **SMART TEMP AUSTRALIA PTY LTD** WILL ONLY BE RESPONSIBLE FOR DAMAGE CAUSED TO THE SMART TEMP PRODUCT, AND ONLY IF IT HAD BEEN CORRECTLY APPLIED IN ACCORDANCE WITH THE MANUFACTURES INSTRUCTIONS. IT IS THE DEALER / CONTRACTORS SOLE RESPONSIBILITY TO ENSURE CORRECT OPERATION OF THE MAJOR EQUIPMENT IS MAINTAINED.

		<h2>Installation Drawing</h2>
<b>Drawing Revision History</b>		Drawing Name
		SMT-450 wired to Gas Heater with cooling
		<small>All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.</small>
18-07-2024	REV 1.0	By: John K
Unit 20, 1488 Ferntree Gully Road Knoxfield Vic 3180		Ph:(03) 9763 0094 www.themostat.com.au