


Note

For single or 2 stage units, simply don't wire to Cool 2 or Cool 3 terminals

For optional economy cycle function as drawn, enter Viking installer menu / 0-10V output / set Y1 = Out & Y2 = IN
Also set Economy function = ON (and set temperature and RH limits as desired)

Typical Actron Air

		<h3>Installation Drawing</h3>				
<p>Drawing Revision History</p> <table border="1"> <tr> <td>7/6/11</td> <td>REV 1.0</td> <td>By: Peter S</td> </tr> </table>		7/6/11	REV 1.0	By: Peter S	<p>Drawing Name</p> <p>Typical Actron Air Tri Capacity Interfaced to a Smart Temp Viking / Economy Cycle</p> <p><small>All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a preliminary drawing.</small></p>	
7/6/11	REV 1.0	By: Peter S				
<p>Unit 20, 1488 Ferntree Gully Road Knoxfield Vic 3180</p>		<p>Ph: (03) 9593 0094 Fax: (03) 9593 0098 www.thermostat.com.au</p>				

ALL CARE AND DILIGENCE HAS BEEN TAKEN IN THE PREPARATION OF THIS INTERFACE DIAGRAM. **SMART TEMP AUSTRALIA PTY LTD** WILL ONLY BE RESPONSIBLE FOR DAMAGE CAUSED TO THE SMART TEMP PRODUCT, AND ONLY IF IT HAD BEEN CORRECTLY APPLIED IN ACCORDANCE WITH THE MANUFACTURES INSTRUCTIONS. IT IS THE DEALER / CONTRACTORS SOLE RESPONSIBILITY TO ENSURE CORRECT OPERATION OF THE MAJOR EQUIPMENT IS MAINTAINED.