


- 1 - Enter Installer menu by pressing and holding status Bar on wall controller for 10 seconds
- 2 - Enter communications sub menu
- 3 - Set unit type - Master or slave. (first unit is master - all others are slaves)
- 4- Set Baud rate 9600

		Installation Drawing	
Drawing Revision History			Drawing Name
			Easy Zone Touch Multiple Wall Panel
13-8-2010 REV 1.0 By: Peter S			<small>All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.</small>
Unit 20, 1488 Ferntree Gully Road Knoxfield Vic 3180			Ph: (03) 9763 0094 Fax: (03) 9763 0098 www.themostat.com.au