


Belimo LMU-24 Actuator
Set to Position 0

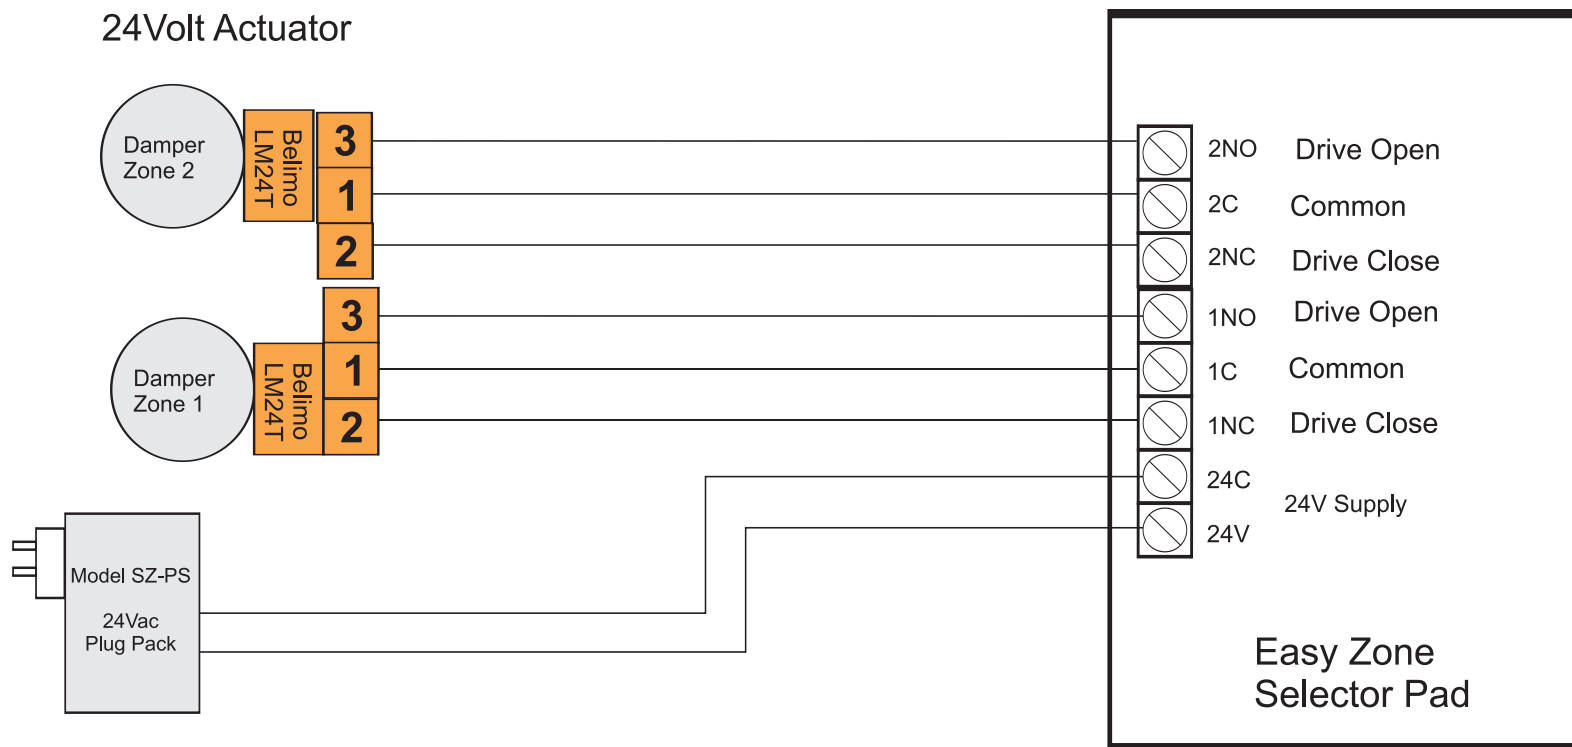


CAUTION

Wiring multiple zones in parallel

Some actuators are not suitable for wiring in parallel due to feedback from actuator. Please check with your damper manufacturer to ensure your actuators are suitable for parallel connection.

Jumper Select

A = Limits closure of both zones.
B = Both zones can be closed.

		<h2>Installation Drawing</h2>													
<p>Drawing Revision History</p> <table border="1"> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </table>															<p>Drawing Name</p> <p>Easy Zone V2 2 Zone Selector Pad</p> <p><small>All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.</small></p>
02-09-2009	REV A	By: JK													
<p>Smart Temp</p>		<p>Ph: (03) 9763 0094 Fax: (03) 9763 0098</p>	<p>www.smart-temp.com.au</p>												