

Smart Temp

Apollo

P/n 44-800



Installation Manual

Version 1.0

TABLE OF CONTENTS

Introduction	6
Getting started	7
Installing the thermostat	8
Disassembly	8
Thermostat location	8
Mounting the subbase	8, 9
Terminal designations	10
Installing the batteries	11
Setting the system switches	12, 13

TABLE OF CONTENTS

System switch functions	13
Typical wiring diagrams	14-24
Heat Only (Gas).....	14
Heat Only (Electric).....	15
Cool Only.....	16
2 or 3 Cool	17
1 Heat / 1 Cool	18
2 Heat / 1 Cool.....	19
1 Heat / 2 Cool.....	20
1 Heat / 1 Cool Heat Pump.....	21
2 Heat / 1 Cool Heat Pump.....	22
2 Heat / 2 Cool Heat Pump.....	23
2 Wire - Gas Heating.....	24

TABLE OF CONTENTS

Installer setup menu	25-46
Entering the menu	25
Selecting programmable or non-programmable operation	26
Selecting program days (programmable mode).....	27
Selecting programmable fan option.....	28
Selecting mode of operation.....	29
Touchscreen lock options.....	30
Selecting the cooling setpoint limit.....	31
Selecting the heating setpoint limit.....	32
Selecting the temperature display.....	33
Selecting time format.....	34
Selecting setpoint display option.....	35
Selecting back light option.....	36

TABLE OF CONTENTS

Installer setup menu (Continued)

Selecting Adaptive Recovery.....	37
Filter reminder.....	38
Selecting the heating and cooling differential.....	39
Internal sensor calibration.....	40
Remote sensor options.....	41
Assigning the 'A' relay.....	42
Selecting low balance point.....	43
Selecting high balance point.....	44
Audible beep option.....	45
Factory reset.....	46

Remote sensor installation.....	47-51
--	--------------

Remote sensors.....	47
---------------------	----

TABLE OF CONTENTS

Remote sensor installation (Continued)

Indoor sensor wiring	47-48
Using multiple sensors for temperature averaging.....	49
Outdoor sensor wiring.....	50-51
Temperature sensor calibration chart.....	51

Testing

Testing fan operation.....	52
Testing conventional heating and cooling operation.....	52-53
Testing conventional heat pump operation.....	53
Testing fossil fuel operation.....	53-54
Testing low balance point (heat pump or fossil fuel).....	54
Testing high balance point (heat pump or fossil fuel).....	55

Adaptive recovery

Basic troubleshooting

Specifications

INTRODUCTION

The Smart Temp 44-800 “Apollo” is a feature-rich touchscreen thermostat that can be battery powered or hardwired to the HVAC equipment. Using a common sense approach to the installation will ensure this product is installed properly and to the customer’s satisfaction. Please take time to read and understand this manual so that installation and testing is performed in an efficient manner.

This manual is to be used in conjunction with the supplied User Manual.

Although great care has been taken in the preparation of this manual, Smart Temp Aust P/L takes no responsibility for errors or omissions contained herein. It is the responsibility of the installer to ensure that this thermostat and the equipment connected to it operate in a safe and efficient manner.

Due to ongoing product improvements, Smart Temp reserves the right to change the specifications of the 44-800 thermostat or its components without notice.

All rights reserved.

*© Smart Temp Australia P/L.
Intellectual rights apply.*

GETTING STARTED

As with any HVAC project, careful installation is the key to a successful outcome. Time taken during the installation process will be rewarded with fewer call-backs.

The steps required to install the 44-800 thermostat are as follows:

1. Read and understand this Installation Manual and Thermostat User Manual.
2. Mount and wire the subbase
3. Install the batteries
4. Set the 4 system switches to match the equipment application.
5. Wire optional remote temperature sensor(s).
6. Power the thermostat.
7. Set the Advanced Installer settings.
8. Test the thermostat.

INSTALLING THE THERMOSTAT

DISASSEMBLY


There are two release slots located on the bottom of the thermostat. Gently push the flat blade of a small screwdriver into one slot at a time and pry upward until the catch disengages. Carefully swing the thermostat upward and away from the subbase. (Figure 1)

THERMOSTAT LOCATION

The 44-800 should be installed in a location that represents the ambient space temperature. Do not install the thermostat in an area where drafts are present, near the floor, behind doors or on an external wall. Avoid placing the thermostat in areas where the air movement is limited, affected by direct sunlight or other areas not typical of the temperature in the space.

MOUNTING THE SUBBASE

When mounting the 44-800 subbase, be aware that drafts may travel down wall cavities and enter the back of the thermostat through the control wire hole in

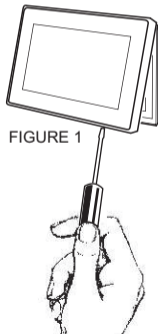

INSTALLING THE THERMOSTAT

the wall. It is important to seal the hole to prevent any drafts that might affect the internal temperature sensor. Pull the control wires through the large opening in the thermostat subbase. Next, level and mount the subbase on the wall using the supplied anchors and screws. (Figure 2)

Do not over tighten the mounting screws as the subbase may warp causing the improper seating of the thermostat connecting pins to the terminal blocks.

Use a properly sized screwdriver and back each screw terminal out (counter clockwise) before landing each wire to its dedicated terminal. Do not over tighten the terminal screws.

Check to ensure that all wires are landed correctly and dressed properly to prevent any shorts.

Refer to Typical System Wiring Diagrams in this manual for proper wiring.

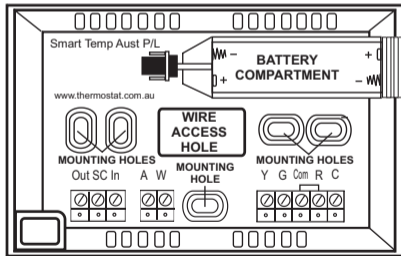


FIGURE 2

INSTALLING THE THERMOSTAT

TERMINAL DESIGNATIONS

Based on the 44-800 slide switch and installer option configurations, some terminals have multiple output functions.

TERMINAL	DESIGNATION
Outside	Outdoor Sensor
Sensor Common	Sensor Common
Inside	Indoor Sensor
A	W2, Y2, Compressor 2, Aux, EH
W	W1, Y3, Reversing Valve
Y	Y1, Compressor 1
R	24 Volt (Hot)
C	24 Volt (Common)

INSTALLING THE BATTERIES

The 44-800 comes with two AAA batteries. Insert the batteries as illustrated for primary or backup power. Even if the thermostat is hardwired, battery backup is essential to maintain the real-time clock in the event of a power failure. All other memory is non-volatile in the event of battery or primary power loss. (Figure 3)

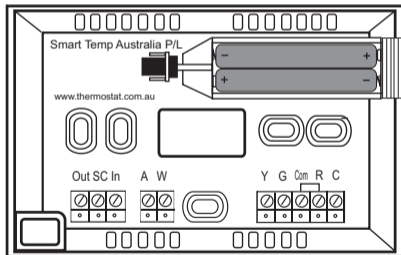


FIGURE 3

SETTING THE SYSTEM SWITCHES

The 44-800 contains a set of four system switches located on the thermostat printed circuit board. (Figure 4) The switches are used to match the thermostat with the HVAC system requirements. Refer to the system switch functions on the next page to properly configure the thermostat.

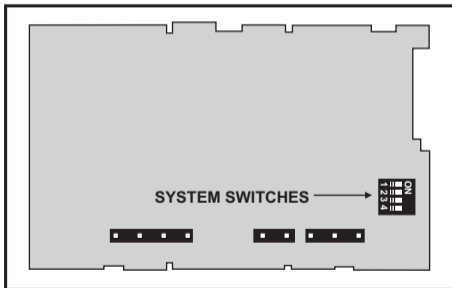


FIGURE 4

SYSTEM SWITCH FUNCTIONS

SW 1 - Equipment Type

Switch 1 sets the equipment type. For heat / cool equipment, set the switch to the OFF position (factory default). For heat pump equipment, set switch 1 to the ON position.

SW 2 - Fan or Reversing Valve

Heat Cool Logic (SW 1 OFF).

For gas systems, set the switch 2 to the OFF position
For electric heat systems, set switch 2 to the ON position.

Heat Pump Logic (SW 1 ON).

For 'O' reversing valve, set switch 2 to the OFF position
For 'B' reversing valve,
set switch 2 to the ON position.

SW 3 - Short Cycle Timer

For 4 minutes short cycle protection, set switch 3 to the OFF position (factory default). For no short cycle protection, set switch 3 to the ON position.


SW 4 - Fossil Fuel Mode

This is a USA requirement - leave OFF in Australia

For conventional heat pump equipment, set switch 4 to the OFF position (factory default).
For fossil fuel equipment, set switch 4 to the ON position.

TYPICAL SYSTEM WIRING DIAGRAMS

HEAT ONLY (Gas)

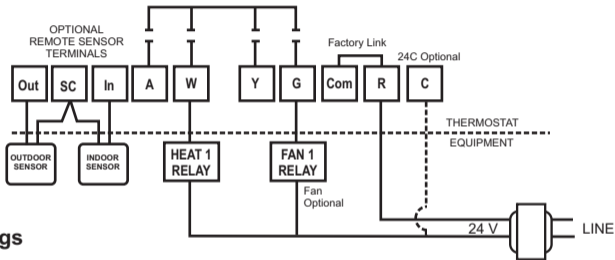


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = OFF	(Equipment controls fan)
Sw3 = OFF	(No affect on setup)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 4Fn = **H** (Heat Only)

TYPICAL SYSTEM WIRING DIAGRAMS

HEAT ONLY (Electric)

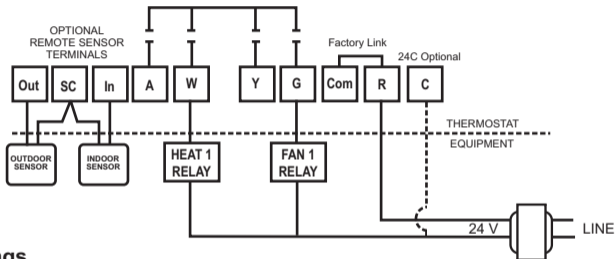


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = ON	(Thermostat controls fan)
Sw3 = OFF	(No affect on setup)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 4 Fn = **H** (Heat Only)

TYPICAL SYSTEM WIRING DIAGRAMS

COOL ONLY

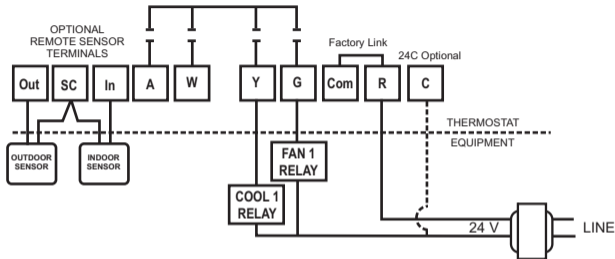


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = ON	(Thermostat controls fan)
Sw3 = OFF	(No affect on setup)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 4 Fn = C (Cool Only)

TYPICAL SYSTEM WIRING DIAGRAMS

2 OR 3 COOL (3 COOL ILLUSTRATED)

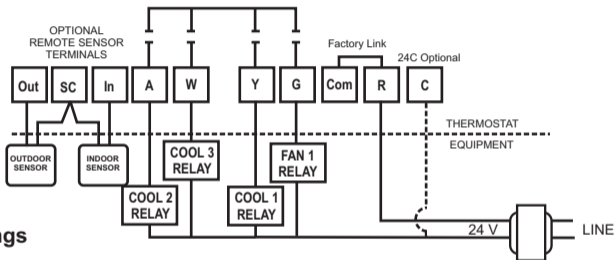


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = ON	(Thermostat controls fan)
Sw3 = OFF	(4 min anti cycle delay)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 4EF = C (Cool Only) Set 17:R4 = C2 (A Relay = Cool 2)
Set 17:R4 = C3 (A Relay = Cool 3 and W = Cool 2)
Set 4:Fn = C (Cool Only Mode)

TYPICAL SYSTEM WIRING DIAGRAMS

1 HEAT / 1 COOL (GAS)

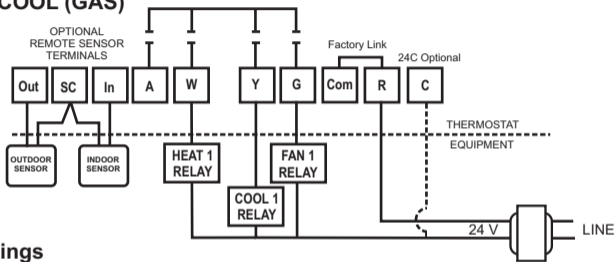


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = OFF	(Equipment controls fan)
Sw3 = OFF	(4 minute short cycle protection)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 4Fn = - (Manual Changeover) or 4Fn = A (Auto Changeover)

TYPICAL SYSTEM WIRING DIAGRAMS

2 HEAT / 1 COOL (GAS)

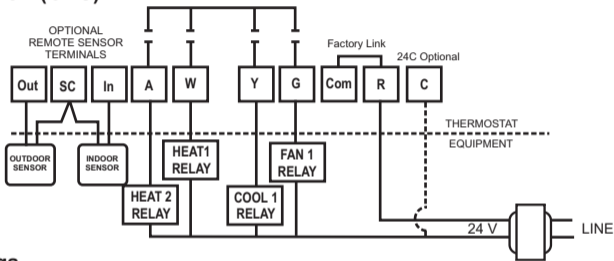


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = OFF	(Equipment controls fan)
Sw3 = OFF	(4 minute short cycle protection)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 17:R4 = H2

TYPICAL SYSTEM WIRING DIAGRAMS

1 HEAT / 2 COOL (GAS)

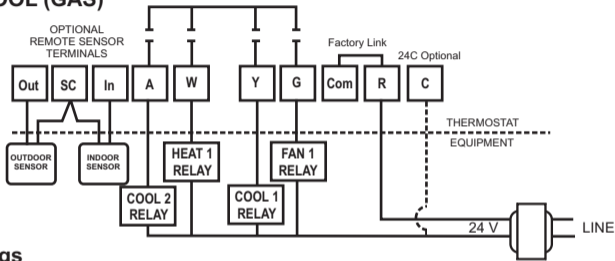


Switch Settings

Sw1 = OFF	(Heat / Cool)
Sw2 = OFF	(Equipment controls fan)
Sw3 = OFF	(4 minute short cycle protection)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 17R4 = C2

TYPICAL SYSTEM WIRING DIAGRAMS

1 HEAT / 1 COOL HEAT PUMP

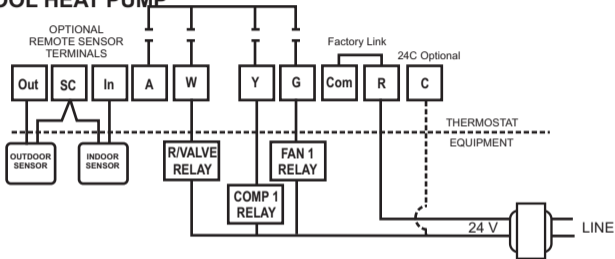


Switch Settings

Sw1 = ON
Sw2 = OFF
Sw3 = OFF
Sw4 = OFF

(Heat Pump)
(OFF='O' reversing valve, ON='B' reversing valve)
(4 minute short cycle protection)
(Leave OFF)

TYPICAL SYSTEM WIRING DIAGRAMS

2 HEAT / 1 COOL HEAT PUMP

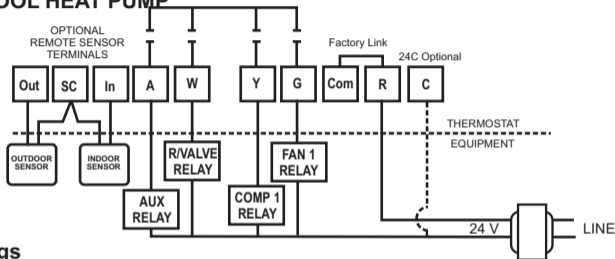


Switch Settings

Sw1 = ON	(Heat Pump)
Sw2 = OFF	(OFF='O' reversing valve ON='B' reversing valve)
Sw3 = OFF	(4 minute short cycle protection)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 17R4 = AU

TYPICAL SYSTEM WIRING DIAGRAMS

2 HEAT / 2 COOL HEAT PUMP (NO AUXILIARY HEAT)

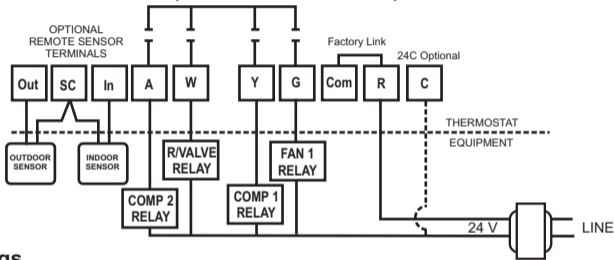


Switch Settings

Sw1 = ON	(Heat Pump)
Sw2 = OFF	(OFF='O' reversing valve ON='B' reversing valve)
Sw3 = OFF	(4 minute short cycle protection)
Sw4 = OFF	(Leave OFF)

In Installer Menu, set 17R4 = Y2

TYPICAL SYSTEM WIRING DIAGRAMS

2 Wire - Gas Heating

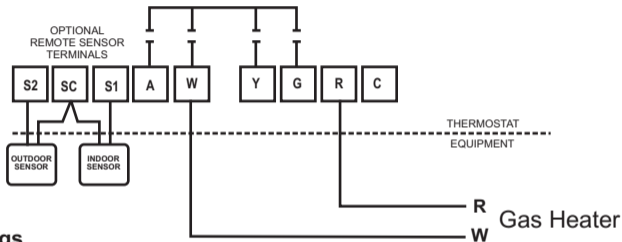

Switch Settings


Sw1 = OFF	(Heat Cool)
Sw2 = OFF	(OFF=Fan controlled by Gas Heater)
Sw3 = ON	(No short cycle protection required)
Sw4 = ON	(Leave OFF)

In Installer Menu, set 4 Fn = H

INSTALLER SETUP MENU

ENTERING THE MENU

Touch and hold both the Clock and Mode section for 5 seconds to enter the Installer Menu.

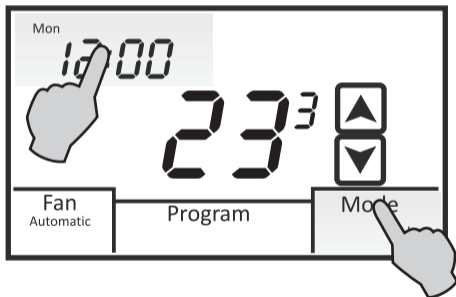


To advance through the menus, touch the Mode section.

INSTALLER SETUP MENU

SELECTING THE PROGRAM

The first menu 1:PR selects programmable or non-programmable operation. Press the UP or DOWN arrows to change the selection. The factory default is **4** (4 schedules per day).

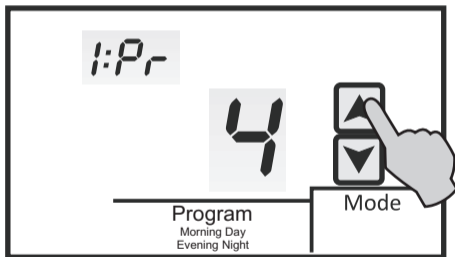


- 0 = Manual Mode (non-programmable)
- 2 = 2 Schedules Per Day (Day / Night)
- 4 = 4 Schedules Per Day (Morning / Day / Evening / Night)

INSTALLER SETUP MENU

SELECTING PROGRAM DAYS

If menu 1:PR is set to 2 or 4, 2:PD is used to select 5 + 2 programming or 7 day programming. Touch the UP or DOWN arrows to change the selection. The factory default is **52**.

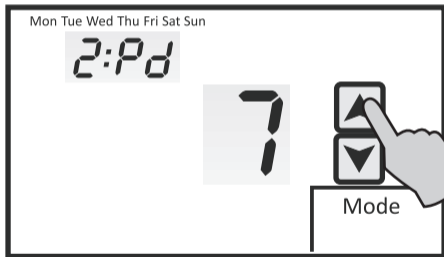


52 = 5 + 2 (Same schedule Mon-Fri and Sat-Sun)
7 = 7 (7 individual day programming)

INSTALLER SETUP MENU

SELECTING PROGRAMMABLE FAN OPTION

Menu 3:PF is the Programmable Fan option which allows selecting continuous or auto fan operation for each program event when programmable mode is enabled.

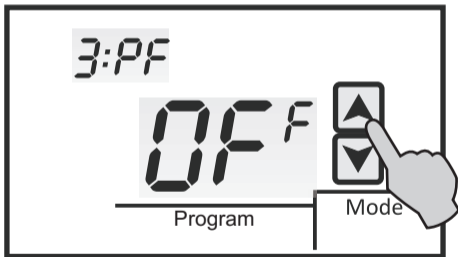


- ON** = Programmable Fan
- OFF** = No Programmable Fan

INSTALLER SETUP MENU

SELECTING MODE

Menu 4:FN selects the mode of operation. The factory default is FN=A for auto changeover. Touch the UP and DOWN arrows to change the selection.

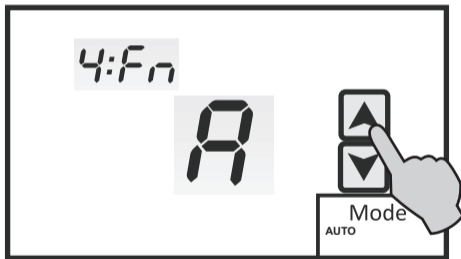


- = Manual Changeover
- A** = Auto Changeover
- H** = Heat Only
- C** = Cool Only
- AO** = Auto / Off Only

INSTALLER SETUP MENU

TOUCHSCREEN LOCK OPTIONS

Menu 5:LC allows you to prevent changes to all or part of the touchscreen functions. The factory default is **OFF**. Touch the UP and DOWN arrows to the selection.

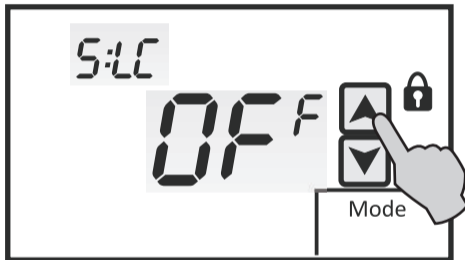

OFF = All Functions Unlocked

1 = Program Locked

2 = Mode Locked

3 = Fan Locked

4 = UP / DOWN Arrows Locked

5 = Clock Locked

6 = Fan / Mode Locked

7 = Fan / Program / Mode Locked


8 = Fan / Program / Mode / Clock Locked

9 = All Functions Locked

INSTALLER SETUP MENU

SELECTING THE COOLING LIMIT


Menu 6:CL selects the minimum cooling set point. The factory default is 10° FC. Touch the UP and DOWN arrows to adjust the limit from 6° - 50° C.

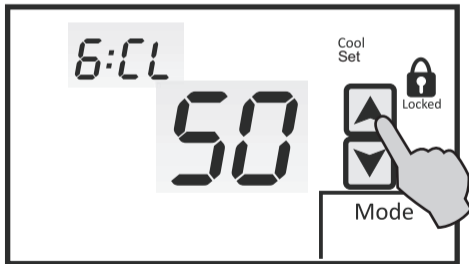

INSTALLER SETUP MENU

SELECTING THE HEATING LIMIT


Menu 7:HL selects the maximum heating set point limit. The factory default is 35° C. Touch the UP and DOWN arrows to adjust the limit from 5° - 49° C.

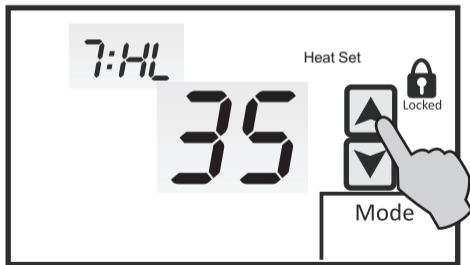

INSTALLER SETUP MENU

SELECTING TEMPERATURE DISPLAY

Menu 8:TD selects the temperature to be displayed in Fahrenheit or Celsius. The factory default is **C** (Celsius). Touch the UP and DOWN arrows to change the display setting.

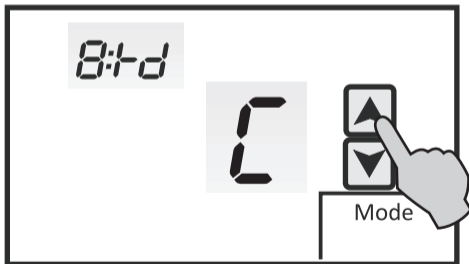


F = Fahrenheit
C = Celsius

INSTALLER SETUP MENU

SELECTING TIME FORMAT

Menu 9:CL selects the time format which can be 12 hour or 24 hour. The factory default is 12 (12 hour). Touch the UP and DOWN arrows to change the format.

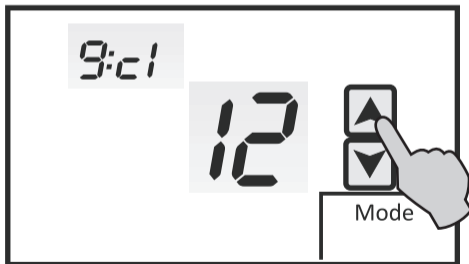


12 = 12 Hour

24 = 24 Hour (Military Time)

INSTALLER SETUP MENU

SELECTING SETPOINT DISPLAY OPTION

Menu 10:ST allows the option of continuously displaying the setpoint temperature with the space temperature. The factory default is **OFF** (no setpoint displayed).

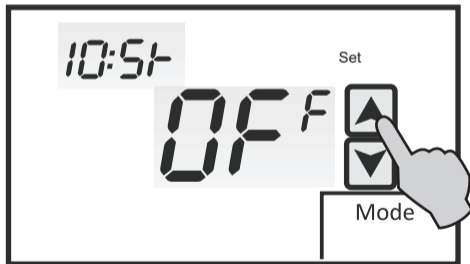


OFF = No Setpoint Displayed
ON = Display Setpoint

INSTALLER SETUP MENU

SELECTING BACK LIGHT OPTION

Menu 11:BL allows you to select the back light option. The factory default is **ON** (Back light ON). Touch the UP and DOWN arrow to change the option.

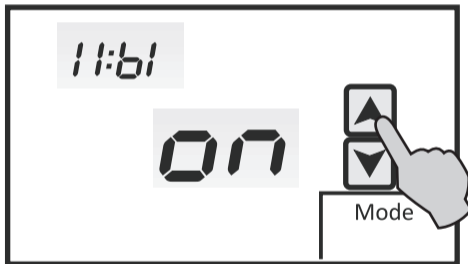

ON = Back Light On (Light stays on for 10 seconds when screen is touched)


OFF = No Back Light

All = Back Light on constantly. High with button press and low at other times (24V power only)

INSTALLER SETUP MENU

SELECTING ADAPTIVE RECOVERY

Menu 12:RC allows you to select the Adaptive Recovery option when the thermostat is configured as programmable. Adaptive Recovery compares the space temperature deviation from setpoint and rate of recovery history to bring the equipment on and reach the setpoint at the scheduled time. Touch the UP and DOWN arrows to change the option.

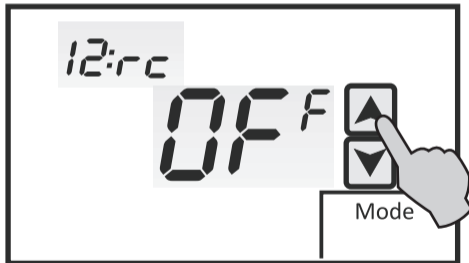


OFF = No Adaptive Recovery

ON = Adaptive Recovery On (For programmable mode only)

INSTALLER SETUP MENU

FILTER REMINDER

Menu 13:FT allows you to select a time when the thermostat will display **FLT** as a reminder that the HVAC system filters need to be changed. The factory default is **OFF**. Touch the UP and DOWN arrows to change the filter reminder time.

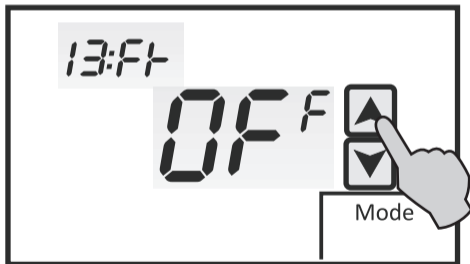


010 = 100 Hours

100 = 1000 Hours (Up to 9,000 hours in 100 hour steps)

INSTALLER SETUP MENU

CHANGING THE HEATING AND COOLING DIFFERENTIAL

Menu 14:SP allows you to select the temperature differential between the heating and cooling set point. The factory default is 1 (0.5° C) Touch the UP and DOWN arrows to change the differential.

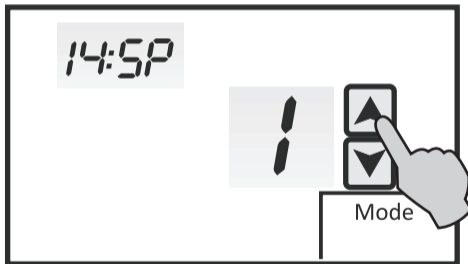

- 1 = 0.5° C
- 2 = 1° C
- 3 = 1.5° C

INSTALLER SETUP MENU

INTERNAL SENSOR CALIBRATION


Menu 15:CA allows you to re-calibrate the internal temperature sensor. The factory default is **0** (0° C). Touch the UP and DOWN arrows to adjust the calibration from -5° to +5° C.



INSTALLER SETUP MENU

REMOTE SENSOR

Menu 16:TT allows you to select indoor remote sensor only or remote sensor with internal sensor. The factory default is **RS** which disables the internal sensor only when an indoor remote sensor is wired. Touch the UP and DOWN arrows to change the option to **AU** if you want to use the internal sensor with a remote sensor as part of temperature averaging.

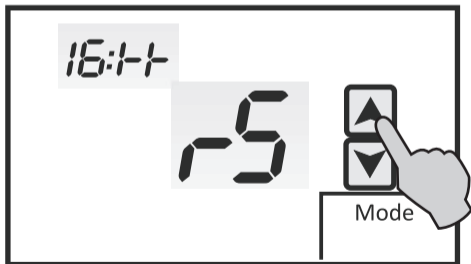

Note

If using outside air or remote room temperature sensor(s) battery life will be drastically reduced.

If using remote sensors it is highly recommended to power the 44-800 from 24V


RS = Indoor Remote Sensor Only

AU = Indoor Remote Sensor With Internal Sensor

INSTALLER SETUP MENU

ASSIGNING THE 'A' RELAY

Menu 17:R4 allows you to assign the 'A' relay based on the specific equipment configuration. The factory default is **OFF**. Touch the UP and DOWN arrows to change the 'A' relay assignment. Note that selections change based on Heat / Cool or Heat Pump (Sw1) configuration.

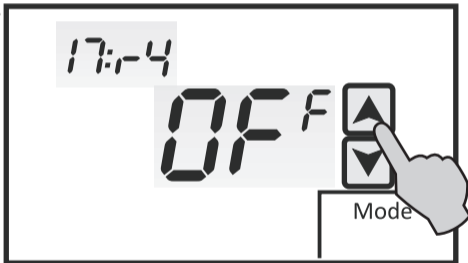

HEAT / COOL

C2 = 2nd Stage Cooling

H2 = 2nd Stage Heating

C3 = 3rd Stage Cooling

HEAT PUMP

EH = Emergency Heat Only


AU = Auxiliary and Emergency Heat

Y2 = 2nd Stage Compressor

INSTALLER SETUP MENU

LOW BALANCE POINT SELECTION USING OUTDOOR SENSOR


Menu 18:LB allows you to select a low balance point setting when the thermostat is configured for Fossil Fuel. When the outdoor temperature falls below the balance point setting, the compressor is locked out and only the fossil fuel furnace is used for heating. The factory default is **OFF**. Touch the UP and DOWN arrows to change the setting. Setting can be from -15° to 25° C.

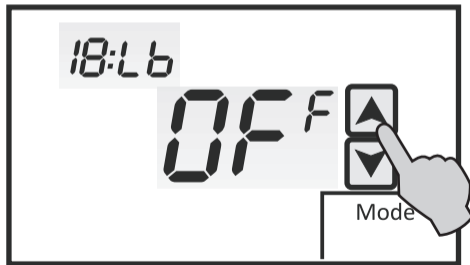

INSTALLER SETUP MENU

HIGH BALANCE POINT SELECTION USING OUTDOOR SENSOR


Menu 19:HB allows you to select a high balance point setting when the thermostat is configured for Fossil Fuel. When the outdoor temperature rises above the balance point setting, the furnace is locked out and only the compressor is used for heating. The factory default is **OFF**. Touch the UP and DOWN arrows to change the setting. Setting can be from 0° to 50° C.

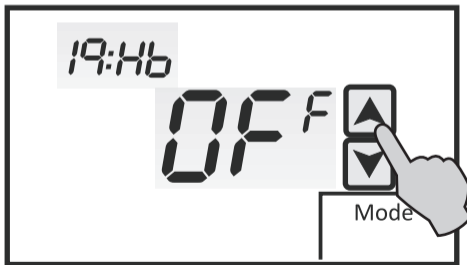

INSTALLER SETUP MENU

AUDIBLE BEEP


Menu 20:BP allows you to turn the audible beep on or off. The factory default is **ON**. Touch the UP and DOWN arrows to turn the audible beep **OFF**.

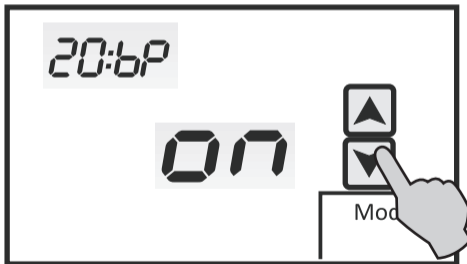

INSTALLER SETUP MENU

FACTORY RESET

Menu 21:RS allows you to reset the thermostat to the original factory defaults. To reset the thermostat, touch the UP and DOWN arrows and set to **ON**.

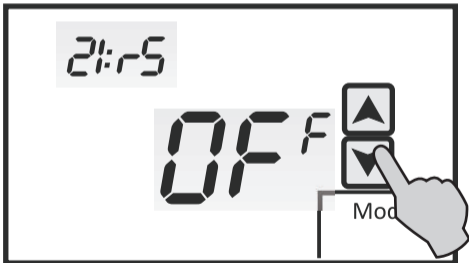

REMOTE SENSOR INSTALLATION

REMOTE SENSORS

There are two type of remote sensors. The RS-1 is a single sensor that can be used indoors or outdoors. The RS-2 contains two sensors. A combination of both sensors can be used for indoor temperature averaging with or without the onboard sensor. Use separate 18-2 shielded cable when wiring sensors.

INDOOR SENSOR WIRING

When the RS-1 is used as an indoor sensor, the 44-800 can be configured to allow only the remote sensor to control the temperature or a combination of remote and onboard sensors can be used for temperature averaging. Refer to 16:TT in the installer setup menu to select the proper remote sensor option. Indoor sensor wires to terminals S1 and SC. (FIGURE 5)

Note

If using outside air or remote room temperature sensor(s) battery life will be drastically reduced.

If using remote sensors it is highly recommended to power the 44-800 from 24V

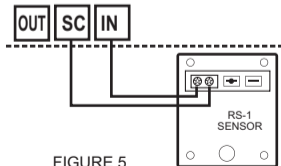


FIGURE 5

REMOTE SENSOR INSTALLATION

Locate the sensor in the same manner as the thermostat. Mount the sensor 300mm away from any outside wall. Do not install the sensor behind doors, in corners or other dead air spaces. Keep the sensor away from direct air flow, supply registers or near sources of heat such as lamps and appliances. The maximum wire length from the sensor to the thermostat is 30meters. Use a separate 18-2 shielded cable for sensor wiring. Prior to wiring the sensor to the thermostat, use an ohm-meter or multimeter to measure the resistance of the sensor. Measure at the end of the wires that will connect to the thermostat. Confirm the resistance value (within 5%) to the temperature where the sensor is mounted. Use a quality digital electronic thermometer to read the temperature at the sensor. Remove the sensor cover and place the thermometer probe next to the remote sensor to verify an accurate reading. Disconnect power to the thermostat when wiring the sensor to the proper sensor terminals. Strip only as much insulation off of the wires as necessary to provide a good contact with the terminals. The sensor is not polarity specific so either sensor lead may be connected to either designated terminal on the thermostat.

REMOTE SENSOR INSTALLATION

USING MULTIPLE SENSORS FOR TEMPERATURE AVERAGING

Multiple indoor remote sensors can be wired in series/parallel for temperature averaging. The total value of the sensors must equal $10\text{k}\Omega$ @ 25°C . The onboard sensor is not part of the equation even if it is configured as part of the averaging circuit. Figure 6 illustrates two RS-2 sensors used for averaging.


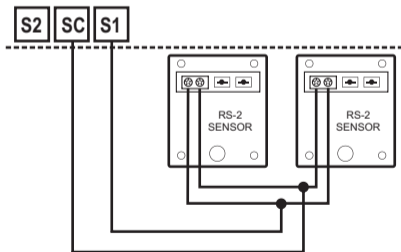


FIGURE 6

REMOTE SENSOR INSTALLATION

OUTDOOR SENSOR WIRING

When the RS-1 is used as an outdoor sensor, the 44-800 will display the outside air temperature as well as control high and low balance points for fossil fuel systems. Refer to 16:TT in the installer setup menu to select the proper sensor option. The outdoor sensor wires to the Sensor Common and Outside air terminals. Figure 7 illustrates both an indoor and outdoor sensor configuration.

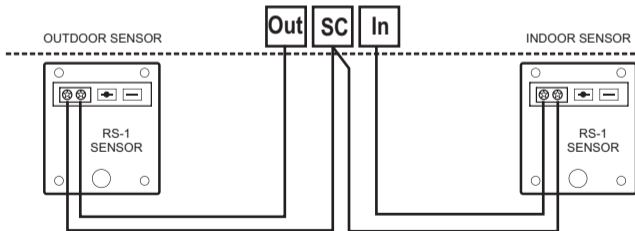

REMOTE OUTDOOR SENSOR INSTALLATION

Mount the sensor on a vertical exterior surface below an overhang. Choose a location protected from direct sunlight and exposure to excessive moisture. Follow the same wiring procedures as installing an indoor sensor.

TEMPERATURE SENSOR CALIBRATION CHART

Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)
0	34.6	21	11.9
5	26.1	26	9.4
10	19.9	32	7.4
15	15.3	37	5.9

NTC type 3 sensor - 10KΩ @ 25° C

TESTING

The 44-800 incorporates a short-cycle timer which can be disabled during testing by setting slide switch 3 to the ON position. Once testing is completed, the timer needs to be re-initiated by setting the switch to OFF.

TESTING FAN OPERATION

Touch **MODE** until the word **OFF** is displayed. Touch **FAN** until the words **Always On** appear. After a brief moment, the internal fan relay 'G' will energize and the system fan should operate. Touch **FAN** again until the word **Automatic** appears. After a brief moment, the internal fan relay will de-energize and the system fan will shut off.

TESTING CONVENTIONAL HEATING AND COOLING OPERATION

Touch **MODE** until the word **Heat** appears. Touch the **UP** arrow and raise the set point a few degrees above the space temperature. After a brief moment, the internal heating relay 'W' will energize and the heating system should operate. The word **Heat** will flash continuously. If the thermostat has been configured for two stage heating, raise the set point a few degrees and the second stage heating relay 'A' will energize. **Heat** will flash twice, pause and repeat the sequence to indicate second stage has been energized.

TESTING

Touch **MODE** until **Cool** appears. Touch the **DOWN** arrow and lower the setpoint a few degrees below the space temperature. After a brief moment, the internal fan 'G' and cooling 'Y' relay will energize. The word **Cool** will flash. If the thermostat has been configured for two stage cooling, lower the set point a few degrees and the second stage cooling relay 'A' will energize. **Cool** will flash twice, pause and repeat the sequence to indicate second stage has been energized.

TESTING CONVENTIONAL HEAT PUMP OPERATION

When the 44-800 is configured for conventional heat pump operation, testing is the same as a heating and cooling system with the exception that the fan "G" relay is always energized with compressor, auxiliary and emergency heat calls.

TESTING FOSSIL FUEL OPERATION

This is NOT typically used in Australia.

When the 44-800 is configured for fossil fuel operation, testing is the same as a

TESTING

conventional heat pump system with the exception that the heat pump is never allowed to run when the fossil fuel furnace is energized. Whenever the thermostat calls for second stage (auxiliary) heat, the compressor 'Y' relay is de-energized along with the fan 'G' relay and the 'A' relay energizes the fossil fuel furnace. With the installation of an outdoor sensor, both high and/or low balance point control can be used to prioritize heat pump or fossil fuel operation based on a selected outdoor temperature.

TESTING LOW BALANCE POINT (Heat Pump or Fossil Fuel)

When an outdoor sensor is used with the 44-800, Installer Option 18:LB allows you to select a low balance point temperature. When the outdoor temperature falls below the low balance point setting, a call for heat from the thermostat automatically energizes the auxiliary heat 'A' relay. To test the low balance point setting, set 18:LB above the displayed outdoor temperature and force a call for heating. The 'A' relay will energize the compressor 'Y' relay will be bypassed. Set 18:LB below the displayed outdoor temperature and force a call for heating. The compressor 'Y' relay will energize and the 'A' relay will not energize as long as the thermostat does not call for second stage. After testing, reset the low balance point temperature to a normal operating range.

TESTING

TESTING HIGH BALANCE POINT (Heat Pump or Fossil Fuel)

High balance point is designed to prevent the auxiliary heat 'A' relay from energizing when the outdoor temperature is above the balance point setting. To test the high balance point setting, set 19:HB below the displayed outdoor temperature and force a call for second stage heating. The 'A' relay will not energize and only the compressor 'Y' and fan 'G' relays will be active. If the thermostat is placed in the **E.heat** mode, the high balance point is ignored and the 'A' relay will energize on a call for heat. After testing, reset the high balance point temperature to a normal operating range.

ADAPTIVE RECOVERY

Adaptive Recovery is only available in programmable mode (Installer Menu 12:RC = ON). The Adaptive Recovery function of the 44-800 permits the user to program a time that a desired set temperature is required. The thermostat then calculates the most energy efficient time to bring on the equipment to reach the set point at the designated time. This calculation involves a complex control algorithm that compares the space temperature deviation from set point and rate of recovery history.

BASIC TROUBLESHOOTING

SYMPTOM	POSSIBLE FAULT AND REMEDY
No LCD display	If thermostat is battery powered only, remove battery compartment and check to see that the positive (+) and negative (-) ends of each battery are oriented properly. If thermostat is hardwired, remove the thermostat from the subbase and check for 24 Volts across terminals 'C' and 'R'. If no voltage, fault could be equipment or wiring related.
Thermostat can not be set for auto changeover	In the Installer Options menu, set 4:FN = A for auto changeover. 4:FN = - is for manual heat / cool 4:FN = C is for cooling only 4:FN = H is for heating only
Temperature display is inaccurate	Air from wall cavity may be leaking into the rear of the thermostat. Seal hole where wiring enters subbase to prevent air infiltration. External influence from appliances, lighting or drafts may be affecting temperature accuracy. Move lamps or other sources of heat away from the thermostat.

BASIC TROUBLESHOOTING

SYMPTOM	POSSIBLE FAULT AND REMEDY
Thermostat not displaying outdoor temperature	Check wiring at outdoor sensor and sensor terminals on thermostat subbase. Outdoor sensor wires to terminals Outside sensor and Sensor Common.
Heat or Cool is flashing	This is not a fault but indicates that the thermostat heating or cooling relay is energized.
Lock icon is displayed when trying to set a higher heating or lower cooling temperature	This is not a fault. The thermostat heating and cooling limits are preventing setting a temperature above or below the limit values. These values can be changed in the Installer Options menu. 6:CL = Cooling Limit. Factory default is 10° C. Adjustable from 6° C - 50° C. 7:HL = Heating Limit. Factory default is 90° F. Adjustable from 5° C - 49° C.

SPECIFICATIONS

Input Voltage (Hardwired)	20-30 VAC 50/60 Hz
Relay Rating	24 VAC @ 1 Amp maximum per relay
Battery Power	(2) AAA 1.5 V
Operating Temperature	0° C to 55° C
Operating Relative Humidity	0-95% (non-condensing)
Storage Temperature	0° C to 65° C
Size:	125 W x 85 H x 25 D mm
LCD Display Size	57 W x 99 H mm
Back Light	White (LED)
Short-cycle Delay	Off or 4 minutes
Displayed Temperature Resolution	0.1° C
Setpoint Range	
Heating	5° C - 49° C
Cooling	6° C - 50° C
Heating and Cooling Limits	Fully adjustable
Onboard Sensors	NTC type 3 100K @ 25c
Remote Sensors	NTC type 3 10K @ 25c
Warranty	3 years (RTB)



20/1488 Ferntree Gully Rd Knoxfield Victoria 3180

www.thermostat.com.au