


Smart Temp Australia ™

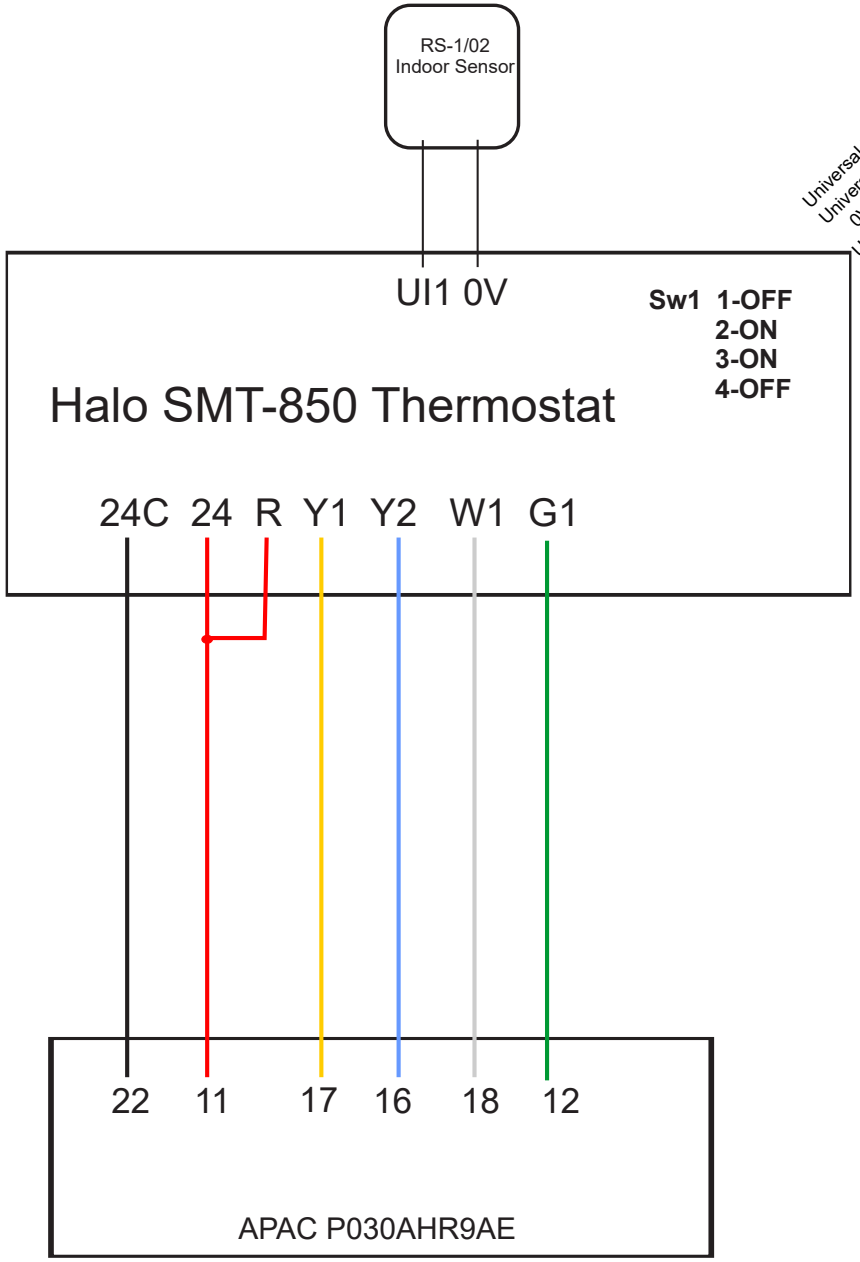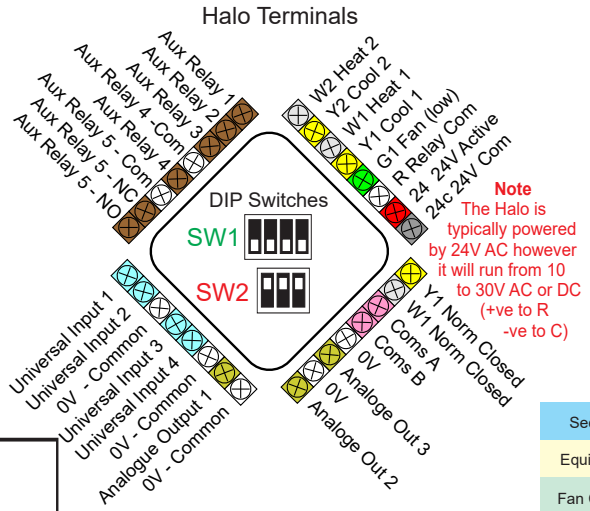



**Note**
The Halo is typically powered by 24V AC however it will run from 10 to 30V AC or DC (+ve to R -ve to C)

Halo Installer settings

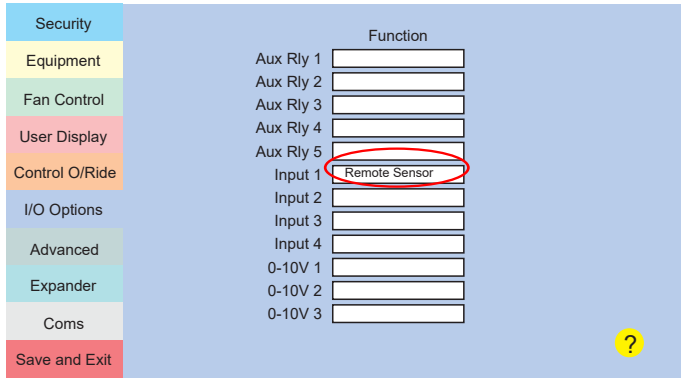


Installer Menu I/O Options and Equipment Settings - Default Pin is 0021

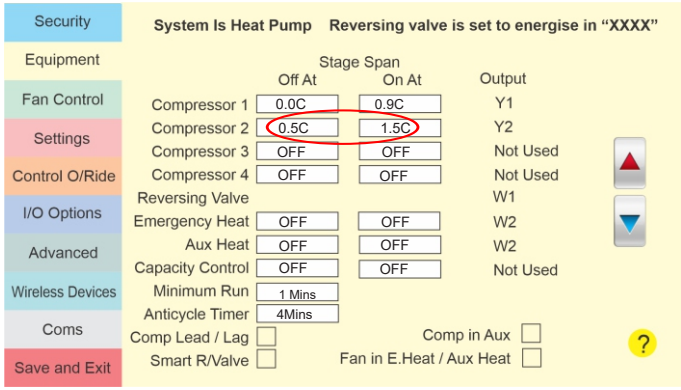Smart Temp Australia ™

# Installation Drawing

| Drawing Revision History | | |
|---|---|---|
| | | |
| | | |
| | | |
| 27-10-2026 | REV 1.0 | By: John K |

Drawing Name

Smart Temp Halo SMT-850 wired to an APAC P030AHR9AE Two stage AC Unit

All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.

Unit 20, 1488 Ferntree Gully Road Knoxfield Vic 3180 Ph:(03) 9763 0094 www.thermostat.com.au