
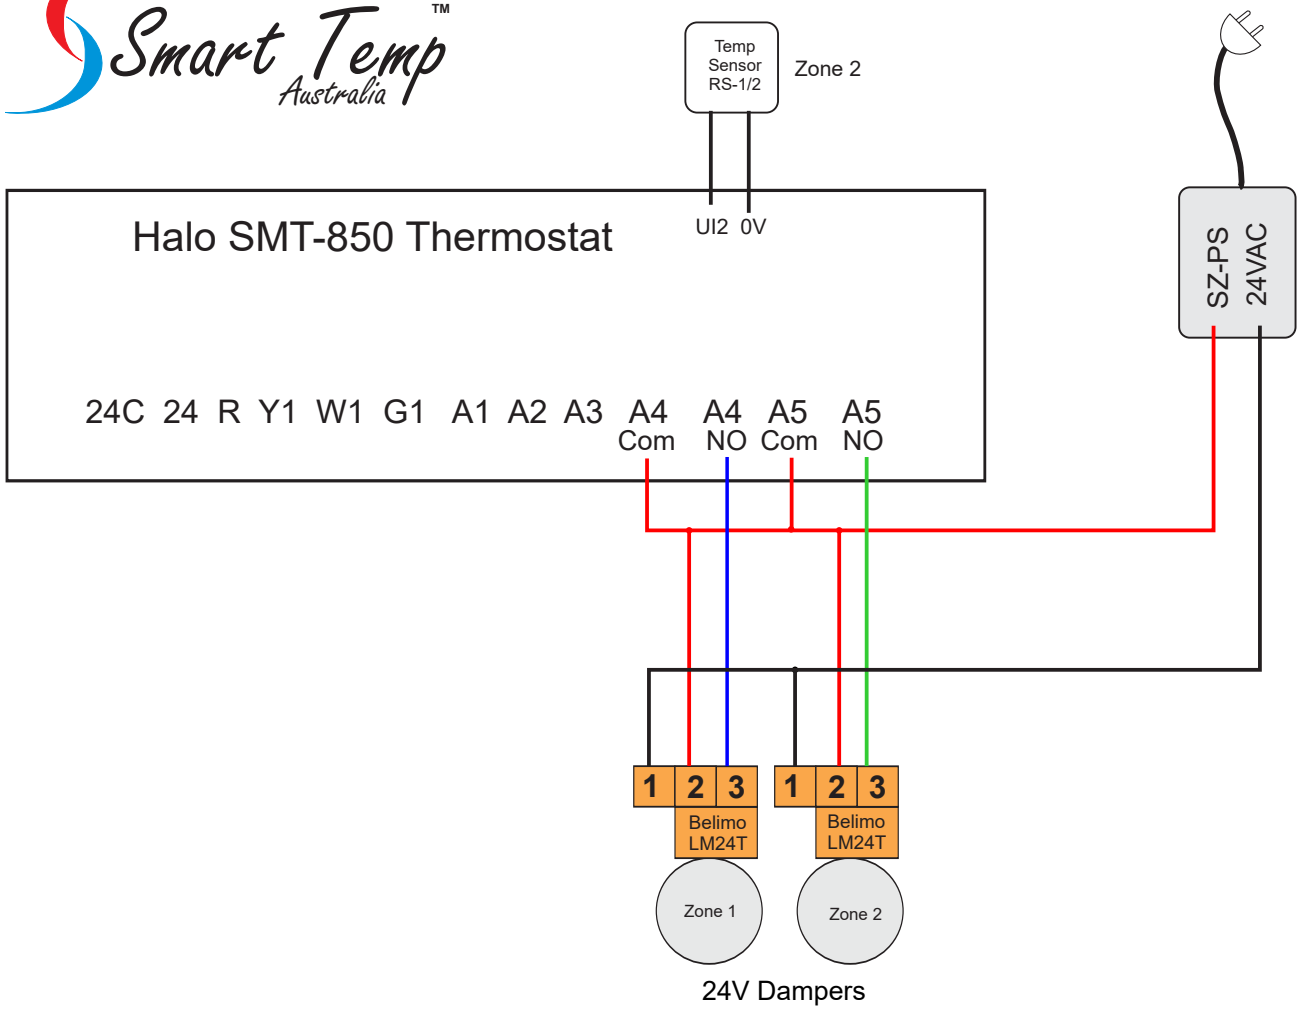
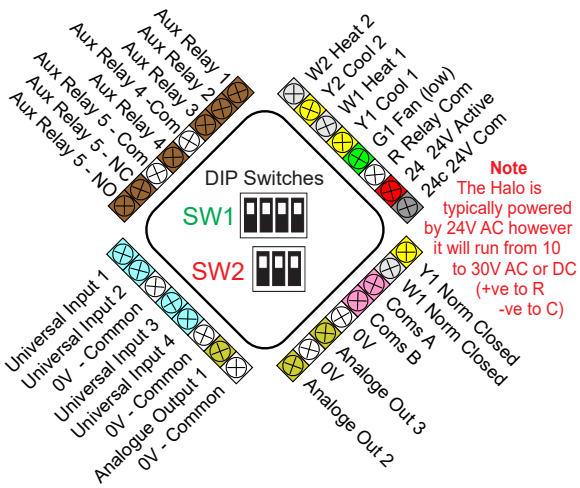



Halo Terminals

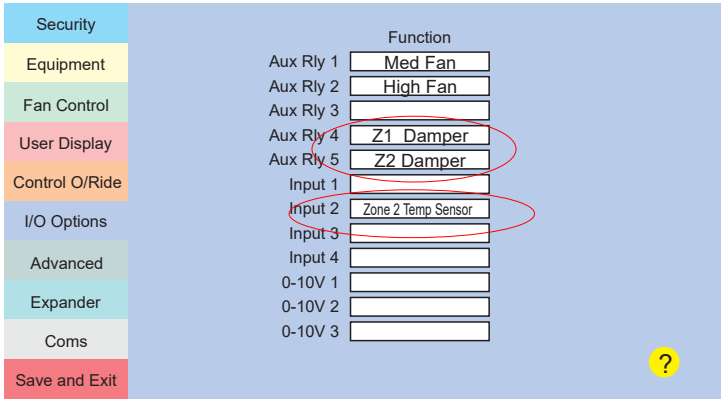


Installer Menu I/O Options - Default Pin is 0021

For 2 zones Set AUX4 to Z1 Damper and AUX 5 to Z2 Damper

# Installation Drawing

**Drawing Revision History**

| | | |
|---|---|---|
| | | |
| | | |
| | | |
| 05-10-2026 | REV 1.0 | By: John K |

Drawing Name

SMT-850 Halo with two 24V Belimo Zone Dampers using Aux Relay 4 & 5, Z2 Temp Sensor with SZ-PS power supply

All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.

Unit 20, 1488 Ferntree Gully Road Knoxfield Vic 3180 Ph:(03) 9763 0094 www.thermostat.com.au