Smart Temp Australia
Making Life Comfortable

CAUTION

Wiring multiple zones in parallel
Some actuators are not suitable for wiring in parallel due to feedback from actuator. Please check with your damper manufacturer to ensure your actuators are suitable for parallel connection.

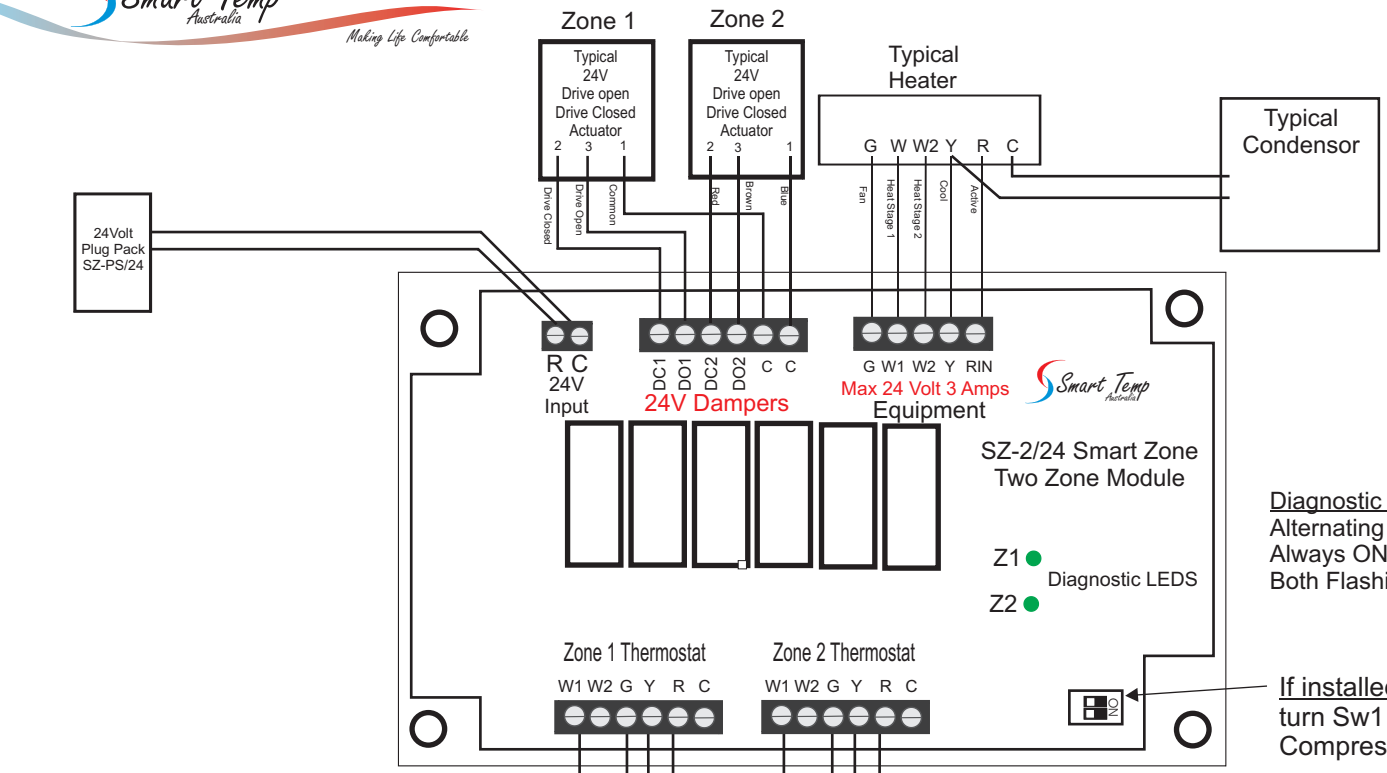

Diagnostic Led
Alternating Flash = Normal operation
Always ON = Thermostat wiring fault
Both Flashing = Time delay

If installed - For Heat Pump systems turn Sw1 & Sw2 ON.
Compressor is Y RV in Heat is W1

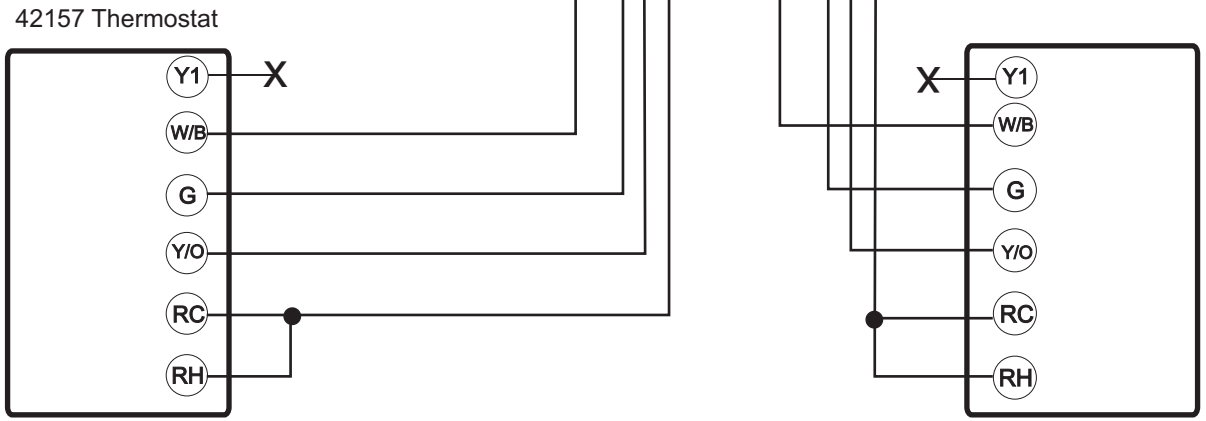

Set Thermostat Switches to:
Sw4 = C
Sw3= HG
Sw6 = STD

Smart Temp Australia

Installation Drawing

Drawing Revision History			
			SZ-2/24
29-05-2006		Rev B	By JK
16-06-2004		REV A	By: JK

Drawing Name
Typical Wiring with Smart Temp Thermostat

All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.

Smart Temp
Ph:(03) 9763 0094
Fax (03) 9763 0098
www.smart-temp.com.au